


Byte av temperaturgivare till MFH värmekapsel Changing thermocouple for MFH heater

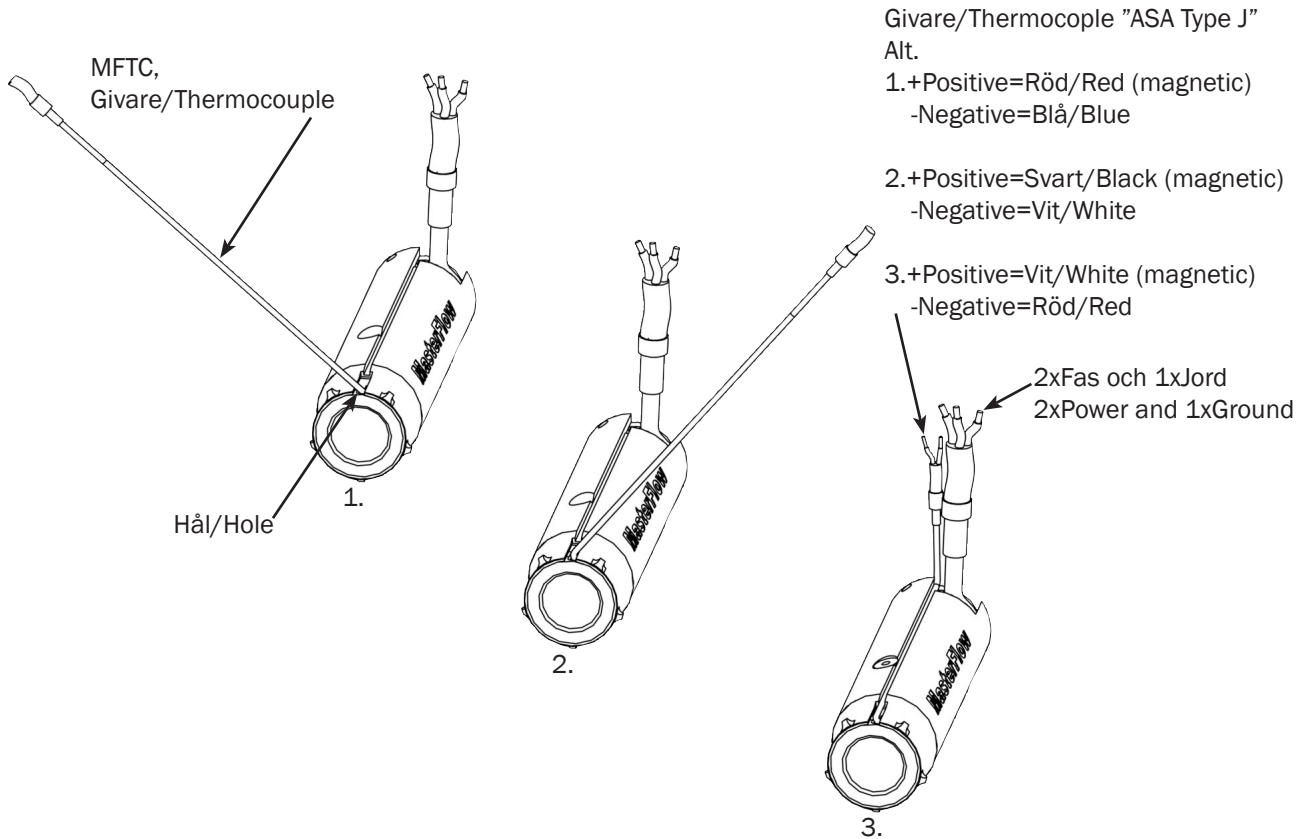

1. Stick in givaren i hålet längst fram på värmekapseln. Se till att givaren bottenar i hålet.
2. Böj givaren rakt uppåt, därefter bakåt mot värmekapseln.
3. Fixera givaren med skruvarna mot värmekapseln. Böj därefter givaren mot elkabeln och montera/fixera med medföljande krympslang. Se till att givaren ligger an i spåret och ej kan ligga an mot verktyget.

1. Put the thermocouple in the hole at the top of the heater. Make sure thermocouple reach bottom of hole.
2. Bend the thermocouple straight up, and then back towards the heater.
3. Align the thermocouple in the groove and fix it with the screws. Bend the thermocouple and use the enclosed heat shrink tube to assemble/fix the thermocouple with the electric cables. When assembling the mold, make sure that the thermocouple do not make contact with the mold steel.

Givaren i kontakt med verktyget.

The thermocouple in contact with the mold.

Fel/Wrong

Rätt/Right

